


# T-NYX S15 REFERENCE SHEET

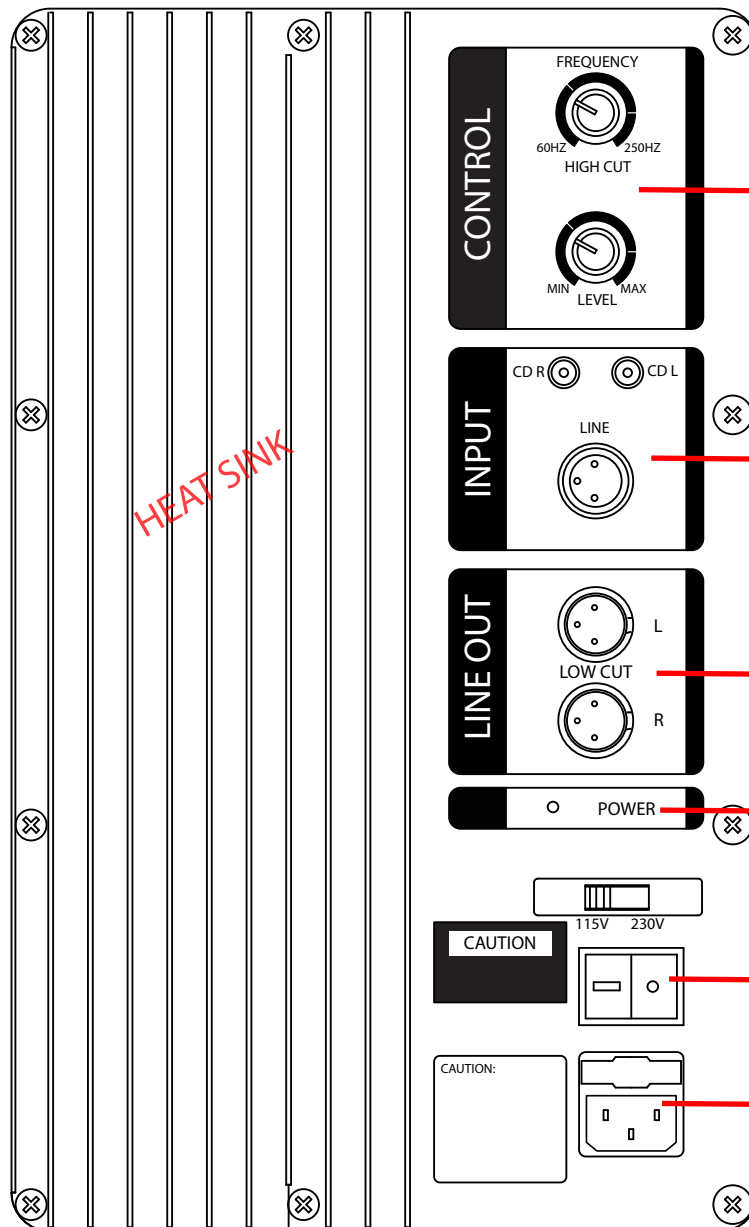

HEAT SINK

ADJUST THE VOLUME AND CUTOFF FREQUENCY OF THE SUB ONLY USING THESE KNOBS.

USE RCA JACK INPUTS FOR LOW LEVEL LEFT AND RIGHT STEREO INPUT. USE XLR INPUT AS NEEDED (MONO ONLY). USE ONLY ONE INPUT AT A TIME (THEY ARE NOT TIED TOGETHER). MAKE SURE THE GAIN OR OUTPUT VOLUME OF THE SOURCE IS NOT CLIPPED, BUT HIGH ENOUGH FOR ADEQUATE AMPLIFICATION.

HIGH PASS OUTPUT FOR MAIN SPEAKERS (NON-AMPLIFIED)

POWER INDICATOR LED

ON/OFF SWITCH

POWER CORD CONNECTION AND FUSE HOLDER. NOTE: SPARE FUSE IN UPPER FUSE COMPARTMENT.